

Code 3031

50 Test Strips

High Range
Free Chlorine




Insta-Test[®] ANALYTIC

High Range Free Chlorine



Using a cup-size sample, immerse strip for **2 seconds**. Remove strip with **pad face up**. **DO NOT SHAKE OFF EXCESS WATER**. With pad still facing up. Immediately compare to color chart. Discard strip after 30 seconds.

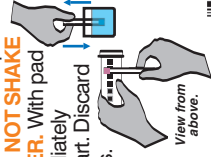

- Keep wet fingers out of the bottle.
- Cap bottle tightly.
- Store in a cool, dry place.



LaMotte Company
Chester town, MD 21620
<http://www.lamotte.com>

